



**NITROGEN REGULATOR KIT
ASSEMBLY AND INSTALLATION INSTRUCTIONS
PACE PART NUMBER 6993-0271-P1
MANUAL NUMBER 5050-0555**

The following instructions provide the user with the information necessary to assemble the PACE Nitrogen regulator Kit.



MOUNTING INSTRUCTIONS

1. Loosen the black plastic adjustment nuts, and slide the screw heads into the channels on right side the power supply case. Do not over tighten nuts. To mount regulator on left side of power supply, relocate screws and adjustment nuts to opposite side of regulator bracket and attach to channels on left side of case.
2. Attach Nitrogen supply to tubing connection located on back of regulator.
3. Insert handpiece connection into handpiece port on front panel.
4. Regulate Nitrogen control until indicator ball is leveled at position "6".

Note: 6 SCFH (Standard Cubic Feet per Hour) is the recommended starting point for Nitrogen delivery. Adjustments may be necessary depending on the soldering application.

CLEANING

Remove Nitrogen regulator from unit before cleaning. The flow tube and flowmeter body can best be cleaned with a little pure soap and water. Avoid liquid soaps, which may have chlorinated solvents in them and avoid prolonged immersion. Flush thoroughly with clear water to remove all soap. When the instrument can no longer be cleaned by this method it should be replaced.

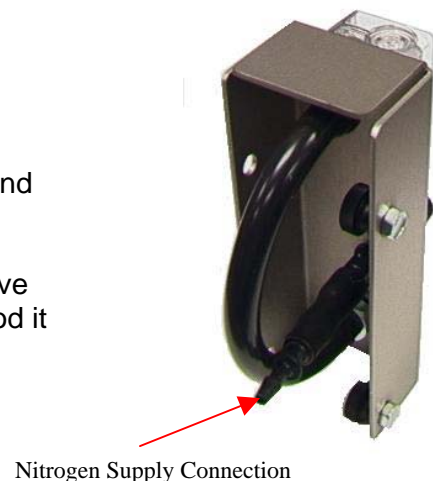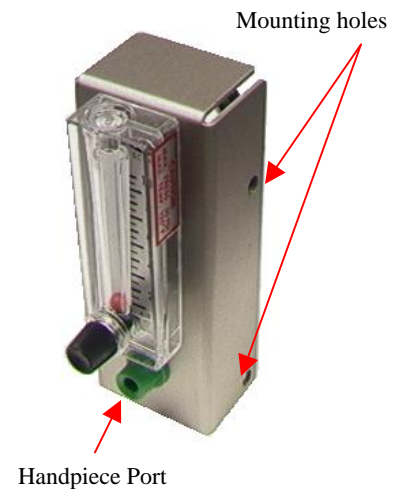

PACE Incorporated
9030 Junction Drive
Annapolis Junction,
MD 20701
Tel: (301) 490-9860
Fax: (301) 498-3252

PACE Europe Limited
13 Tanners Drive
Blakelands
Milton Keynes
Tel: (44) 1908-277666
Fax: (44) 1908-277777